

IRED APPROVAL SHEET

AC282AQ-YRR-500mA Part No:

NOTE :


Green Part

MAKER			CUSTOMER		
SOLIDLITE					
R&D	QA	Sales	Checked	Approved	

Prepared	Checked	Approved		
Rachel Lee	Sky Lin/Sander Wu	Kenneth Wu		



Description of P/N No.

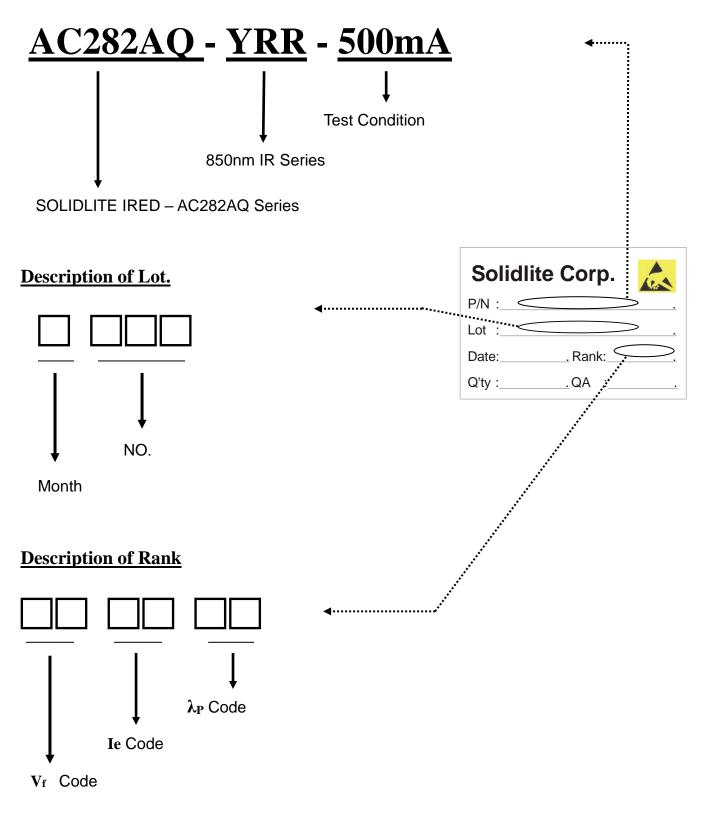




Absolute Maximum Ratings at T_a=25°C

Parameter	MAX.	Unit	
DC forward current	1	Α	
Power Dissipation	3.3	W	
Pulse Current	2	Α	
Reverse Voltage (Vr)	5	V	
Junction temperature (T _j)	145	°C	
Electrostatic Discharge Classification(HBM)	2000	V	
Operating Temperature Range	-40°C to +85℃		
Storage Temperature Range	-55℃ to +125℃		
Lead Soldering Temperature	260° C for 10 seconds		
Electrical and Optical Characteristics at T _a =25 [°]	°C		

Parameter	Test Condition	Symbol	Min.	Тур.	Max.	Unit
Forward Voltage	I _F =500mA	VF	2.6		3.3	V
Reverse Current	V _R =5V	IR	_	_	10	μA
Peak Wavelength	I _F =500mA	$\lambda_{\mathbf{P}}$		850	_	nm
Spectral Bandwidth	I _F =500mA	Δλ	_	40		nm
Radiant Intensity	I _F =500mA	Ie		440	_	mW/sr
Total Radiant Flux	I _F =500mA	Фe		650		mW
Rise/Fall Time	Rise and fall times of Ie (10% ~90%)	Tr/Tf	_	10/15		ns
Viewing Angle	—	2 ⊖ 1/2	_	50	_	deg
Thermal Resistance	_	R js	_	9	_	K/W

Recommend forward current for longer duration is 500mA. These values measured by Spectrum Analyzer of SOLIDLITE.



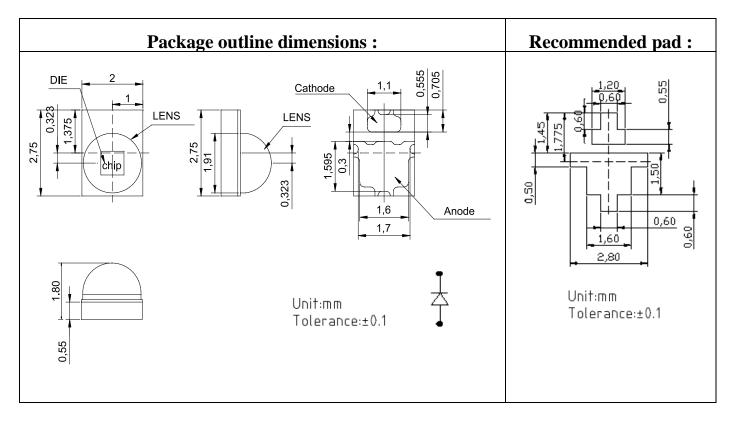

Surface Mounting Condition

In automatic mounting of the SMD IREDs on printed circuit boards, any bending, expanding and pulling forces or shock against the SMD IREDs shall be kept min. to prevent them from electrical failures and mechanical damages of the devices.


Soldering Reflow

Soldering of the SMD IREDs shall conform to the soldering condition in the individual specifications. SMD IREDs are designed for Reflow Soldering.

In the reflow soldering , too high temperature and too large temperature gradient such as rapid heating / cooling may cause electrical & optical failure and damages of the devices .

Solidlite can not guarantee the IRED after they have been assembled using the solder dipping method.

Recommended Soldering Temperature _ Time Profile (Reflow Soldering)

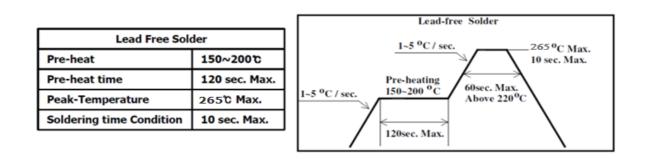





Typical Electrical / Optical Characteristics Curves


(25°C Ambient Temperature Unless Otherwise Noted)

Relative Radiant Intensity & Ambient Temperature

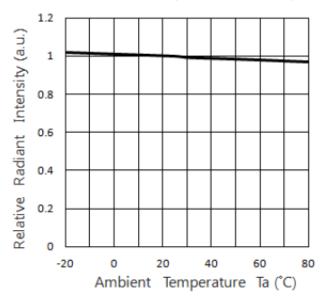

Forward Current & Ambient Temperature

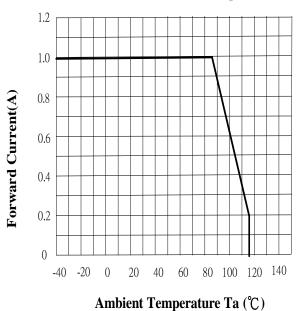


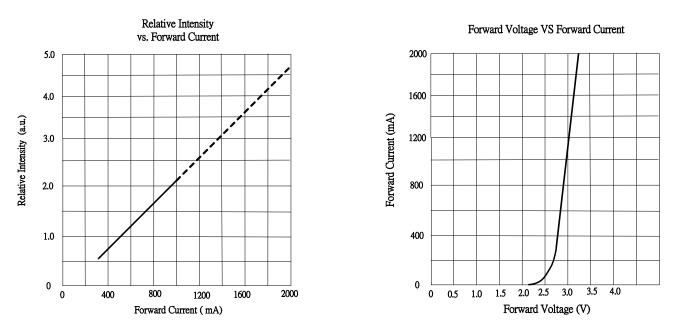


No. 15, Sanmin S.Rd., Fongshan Village, Hukou Township, Hsinchu County 303, Taiwan, R.O.C. TEL:886-3-5986248 FAX:886-3-5986247 http://www.solidlite.com



Relative Intensity vs Wavelength

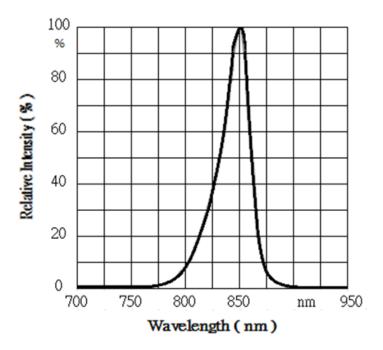



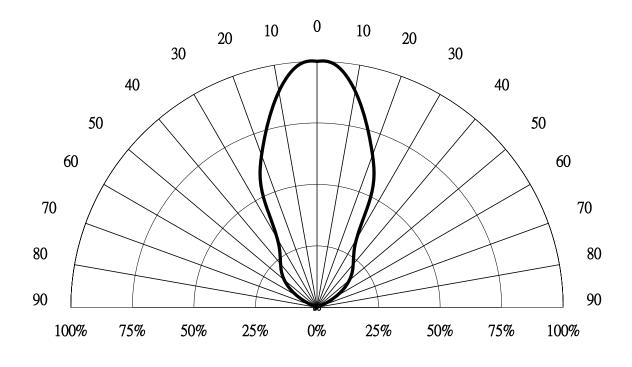



Cautions :

1. Storage

*Storage Conditions

Before opening the package:

The IREDs should be kept at 30° C or less and 90% RH or less. The IREDs should be used within a

year. When storing the IREDs, moisture proof packaging with absorbent material (silica gel) is recommended. After opening the package:

The IREDs should be kept at 30° C or less and 70%RH or less. The IREDs should be soldered within 72 hours (3days) after opening the package. If unused IREDs remain, they should be stored in moisture proof packages, such as sealed containers with packages of moisture absorbent material (silica gel). It's also recommended to return the IREDs to the original moisture proof bag and to reseal the moisture proof bag again.

*If the moisture absorbent material (silica gel) has faded away or the IREDs have exceeded the storage time, baking treatment should be performed using the following condition.

Baking treatment: more than 24 hours at $65+/-5^{\circ}C$.

*Solidlite IRED electrode sections are comprised of a silver plated copper alloy. The silver surface may be affected by environments which contain corrosive gases and so on. Please avoid conditions which may cause the IRED to corrode, tarnish or discolor. This corrosion or discoloration may cause difficulty during soldering operations. It is recommended that the user use the IREDs as soon as possible.

*Please avoid rapid transitions in ambient temperature, especially in high humidity environments where condensation can occur.

2. Moisture Proof Package

*When moisture is absorbed into the SMT package it may vaporize and expand during soldering. There is a possibility that this can cause exfoliation of the contacts and damage to the optical characteristics of the IREDs. For this reason, the moisture proof package is used to keep moisture to a minimum in the package.

*The moisture proof package is made of an aluminum moisture proof bag whit a zipper. A package of a moisture absorbent material (silica gel) is inserted into the aluminum moisture proof bag. The silica gel changes its color from blue to pink as it absorbs moisture.

3. Heat Generation

*Thermal design of the end product is of paramount importance. Please consider the heat generation of the IRED when making the system design. The coefficient of temperature increase per input electric power is affected by the thermal resistance of the circuit board and density of IRED placement on the board, as well as other components. It is necessary to avoid intense heat generation and operate within the maximum ratings given in this specification. *The operating current should be decided after considering the ambient maximum temperature of IREDs.



4. Static Electricity

*Static electricity or surge voltage damages the IREDs.

It is recommended that a wrist band or an anti-electrostatic glove be used when handling the IREDs.

*All devices, equipment and machinery must be properly grounded.

It is recommended that measures be taken against surge voltage to the equipment that mounts the IREDs.

- *When inspecting the final products in which IREDs were assembled, it is recommended to check whether the assembled IREDs are damaged by static electricity or not. It is to find static-damaged IREDs by a light-on or a VF test at a lower current (below 1mA is recommended)
- *Damaged IREDs will show some unusual characteristics such as the leak current remarkably increases, the forward voltage becomes lower, or the IREDs do not light at the low current.

5. Cleaning

- *It is recommended that isopropyl alcohol be used as a solvent for cleaning the IREDs. When using other solvents, it should be confirmed beforehand whether the solvents will dissolve the package and the resin or not. Freon solvents should not be used to clean the IREDs because of worldwide regulations.
- *Do not clean the IREDs by the ultrasonic. When it is absolutely necessary, the influence of ultrasonic cleaning on the IREDs depends on factors such as ultrasonic power and the assembled condition. Before cleaning, a pre-test should be done to confirm whether any damage to the IREDs will occur.


6. Other

- *Care must be taken to ensure that the reverse voltage will not exceed the absolute maximum rating when using the IREDs with matrix drive.
- *The IREDs described in this brochure are intended to be used for ordinary electronic equipment (such as
- office equipment, communications equipment, measurement instruments and household appliances). Consult Solidlite's sales staff in advance for information on the applications in which exceptional quality and reliability are required, particularly when the failure or malfunction of the IREDs may directly jeopardize life or health (such as for airplanes, aerospace, submersible repeaters, nuclear reactor control systems, automobiles, traffic control equipment, life support systems and safety devices).
- *User shall not reverse engineer by disassembling or analysis of the IREDs without having prior written consent from Solidlite. When defective IREDs are found, the user shall inform Solidlite directly before disassembling or analysis.
- *The formal specifications must be exchanged and signed by both parties before large volume purchased begins.
- *The appearance and specifications of the product may be modified for improvement without notice.



Pleasse follow the guideline to grab LEDs:

- DO NOT touch lens with fingers.
- DO NOT touch lens with tweezers.
- Use tweezers to grab LED(Shown as below).

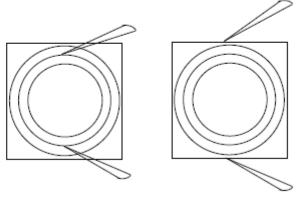

Wrong(X)

Correct(O)